

TouchALL™

EasyBoard


Coordinate Calibration User Manual

Coordinate calibration tool user manual for TouchALL™ EasyBoard model

1. Windows Calibration Method

This coordinate method is provided by Microsoft® Windows.

- A. Please make sure that the USB connection of touchscreen is plugged on PC USB port.
- B. On your PC, run tablet PC setting PC from Start Menu>>Control Panel.
- C. Click Calibrate button as show in below red rectangle box.

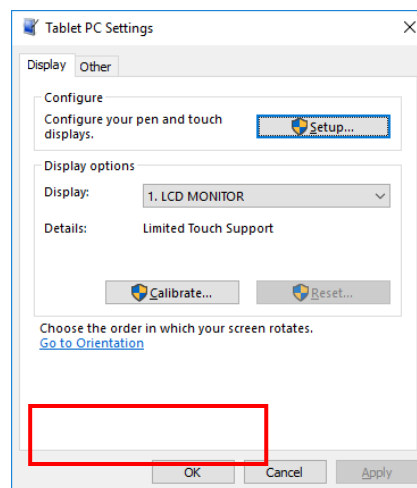

- D. Please click "+" point at EasyBoard touch screen sequentially.




- E. The coordinate calibration process is complete and the program will exit as show below.




2. Coordinate Calibration Method by Calibration Controller

The calibration controller is a coordinate calibration tool provide by RNDPLUS Co., Ltd for simple calibration.

- A. Please make sure that the USB connection of touchscreen is plugged on PC USB port.
- B. Pleas download Calibration Controller Tool from <http://www.rndplus.com/download> using web-browser on PC.
- C. After the download is complete, unzip the CalibrationController.zip at a folder.
- D. Run CalibrationController.exe at the unzipped folder.
- E. Please click EasyBoard touchscreen sequentially, as shown below.

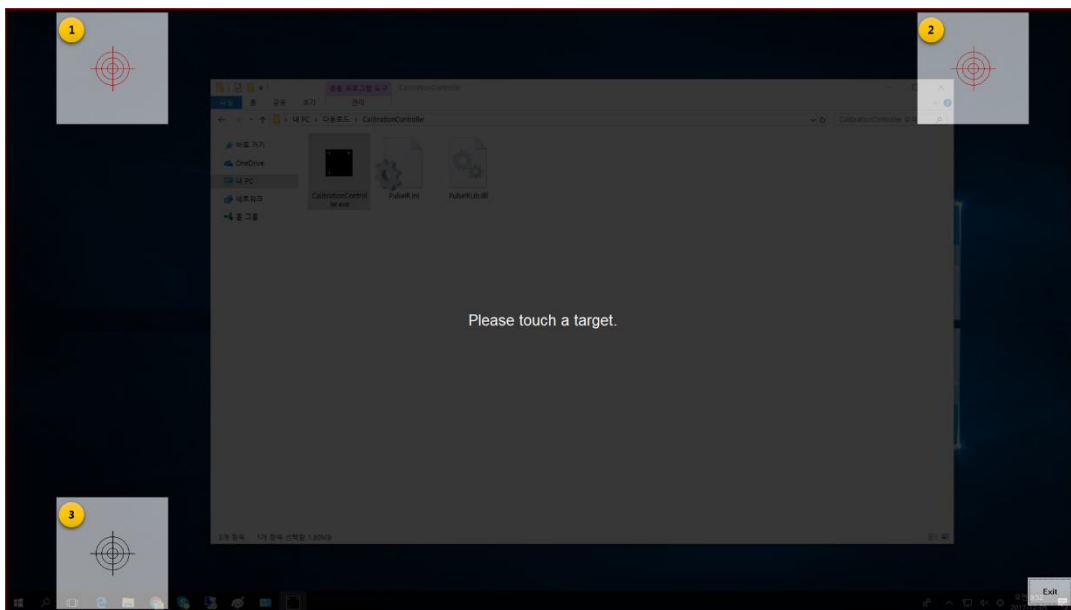

F. Program will exit after 3point touchscreen click as shown below.

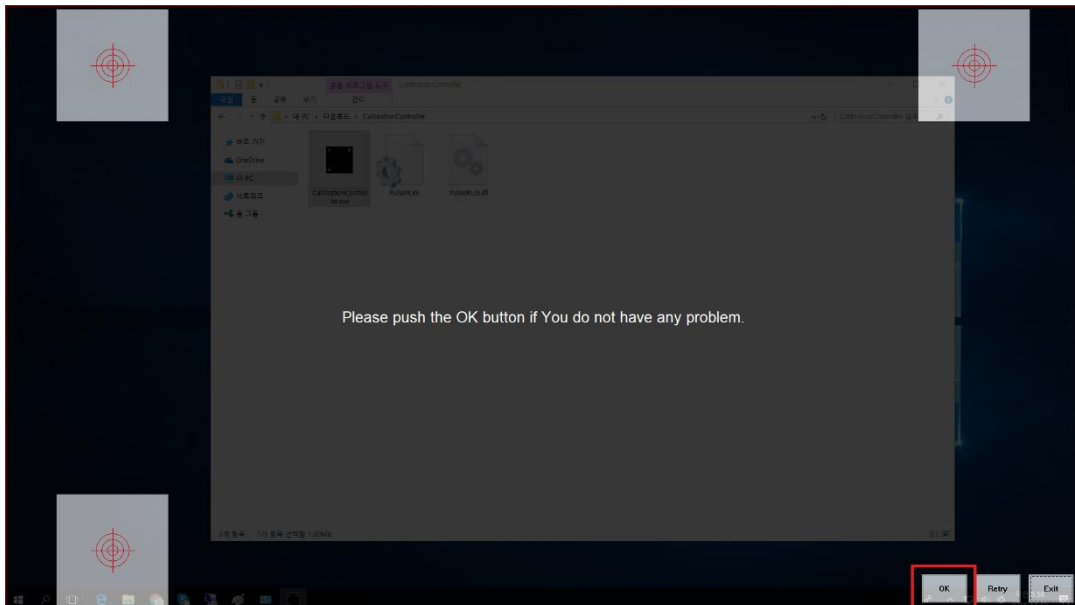

TouchALL™ EasyBoard

TouchALL™ EasyBoard

<http://www.rndplus.com>

(C)RNDPLUS Co., Ltd 2010~2017 All rights reserved

©RNDPLUS Co., Ltd 2010-2017 All rights reserved